




## Memory Control Instructions

Value Electric Adjustable Height Base





### INITIALIZATION **\*PERFORM RESET BEFORE 1ST USE\***

- Press both  and  buttons at the same time until both columns are in lowest position and then rebound 2-5mm.
- Release  and  arrows, initialization is complete .



### NORMAL OPERATION

- Press  or  button to adjust the height.

### SETTING & USING MEMORY PRESET POSITIONS

- Press and hold  or  button, then release. Move desk to desired height.
- Click button **S**, then click button **1**, **2**, **3**, or **4** within 3 seconds. Position is now saved.
- Quickly press **1**, **2**, **3**, or **4** to move to stored position.


### LOCK HEIGHT LIMITS

- Press and hold  or  button, then release. Move desk to desired highest or lowest position.
- Press and hold button **S**, then press and hold: **3** (highest position) **1** (lowest position) for about 3 seconds.
- Letter "L" is shown on screen. This means position is locked at highest or lowest position. Release buttons.
- Desk will not move above/below locked position. Memory positions above/below locked positions will be lost.

### UNLOCK HEIGHT LIMITS

- Press and hold button **S**, then press and hold **2** for about 3 seconds.
- Letter "C" is shown on screen. This means the desk is unlocked and can be moved in full range.

### CHANGE DISPLAY UNIT FORMAT

- Press and hold button **S**, then press and hold  for about 3 seconds. Release buttons.
- Height information will change between centimeters and inches.